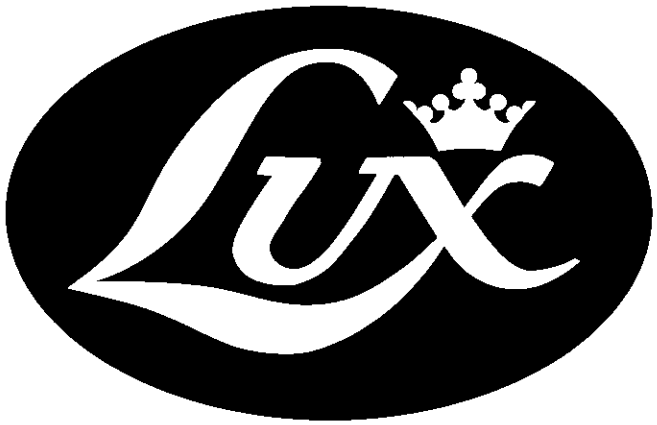

C L A S S I C

INSTALLATION AND INSTRUCTION MANUAL
INSTRUCCIONES PARA INSTALACION Y USO

TUMBLE DRYER WT 50 - WT 60
SECADORA WT 50 - WT 60

CONTENTS

Warnings ..... Page 3
Installation ..... Page 4
Electrical connection ..... Page 5
Getting to know your machine ..... Page 6
Control panel ..... Page 6
Symbols and controls ..... Page 6
Drying times ..... Page 7
Using your machine ..... Page 7
Hints on drying ..... Page 8
Maintenance ..... Page 9
External cleaning ..... Page 9
Cleaning the door ..... Page 9
Cleaning the filter ..... Page 9
Something not working? ..... Page 9

TECHNICAL SPECIFICATIONS

		WT 50	**WT 60**
DIMENSIONS	Height	85 cm	85 cm
	Width	60 cm	60 cm
	Depth	57 cm	57 cm
POWER SUPPLY VOLTAGE		220-230 V / 60 Hz	220-230 V / 50 Hz
TOTAL POWER ABSORBED		2150 W (10 A)	2150 W (10 A)
DRYING CAPACITY	Cotton, linen	5 kg	5 kg
	Synthetics, delicate fabrics	2 kg	2 kg

IMPORTANT INFORMATION

YOU MUST READ THE WHOLE OF THIS INSTRUCTION BOOK BEFORE YOU USE THE APPLIANCE. FOLLOW THE ADVICE CAREFULLY.

KEEP THE BOOK FOR FUTURE REFERENCE. IF YOU SELL OR GIVE AWAY THE APPLIANCE, MAKE SURE THAT THE BOOK IS PASSED TO THE NEW OWNER.

WARNINGS

- **The following warnings are provided in the interest of overall safety. You must read them before the appliance is installed or used.**

INSTALLATION

- Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.
- Make sure that the appliance does not stand on its electrical supply cable.
- This tumble dryer is designed to be vented through to the open air. The appliance should have its own ventilation system which should not be joined with any other ventilation system connected to any other appliance.
- In order to prevent the appliance from overheating, it is important that the condensation vents are not obstructed.

USAGE

- Always unplug the appliance after use.
- Never tumble dry items that have had contact with chemicals such as dry cleaning fluid. These are of a volatile nature and could cause an explosion.
- The users should always check that they have not left their gas lighters (disposable or otherwise) in their clothing.
- Leave the porthole door slightly ajar when not in use to preserve the door seal.
- Fluff filter must be cleaned after every use.
- Do not operate the appliance with a damaged filter or with no filter at all, as this may cause a fire.

SERVICE/REPAIR

- You should not attempt to repair the machine yourself. Repairs carried out by inexperienced or unqualified persons may cause injury and/or more serious faults to the machine.
- This product should be serviced by an authorised Service Centre only, and only genuine spare parts should be used.

GENERAL SAFETY

- It is dangerous to modify the specifications of this appliance in any way.
- This appliance is designed to be used by adults. Children should not be allowed to touch the controls or play with the product.
- Pets and small children may climb into tumble dryers. Check your appliance each time before use.
- The glass door becomes very hot during the drying cycle. Keep children away from the appliance while it is in use.

INSTALLATION

Install the appliance in a well ventilated room or close to a window since, whilst drying, the tumble dryer will expel a certain amount of moist air.

Room temperature must not exceed 35ºC.

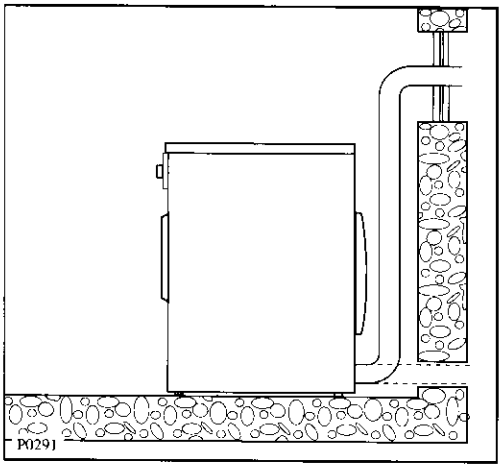

Condensation may be discharged either through a vent outlet provided at the back or through the side vent outlet.

The unused outlet must be covered with the cover provided for such a purpose.

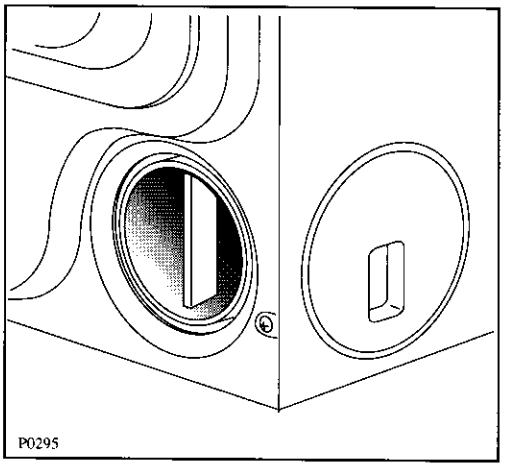

With the special plastic flexible tube (vent hose), available on request by your local dealer, you may discharge condensation directly outdoors.

The vent hose collar is placed in the rear vent outlet. Remove the collar (A) by pulling it out of the vent outlet. Attach the collar to the vent hose until tight. Fit the collar into the required vent outlet.

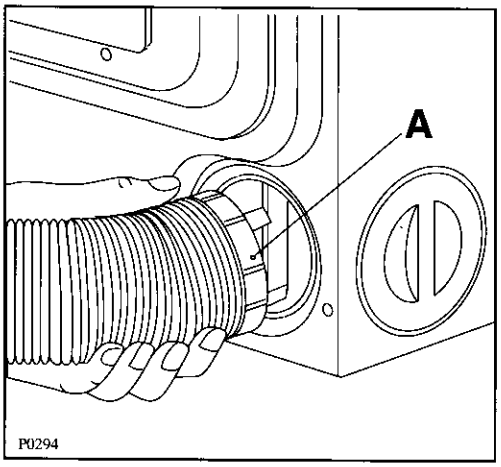

The length of the vent hose must not be more than 2 m and it must not contain more than two bends when it is placed in position for operation.

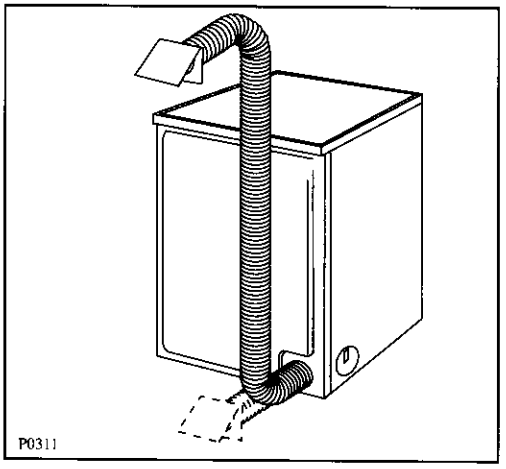

It is absolutely essential not to connect the flexible vent hose to, for example, a chimney or flue pipe designed to carry the exhaust from a fuel burning heating appliance.

The capacity of the venting circuit must be at least 150 m^3/h.

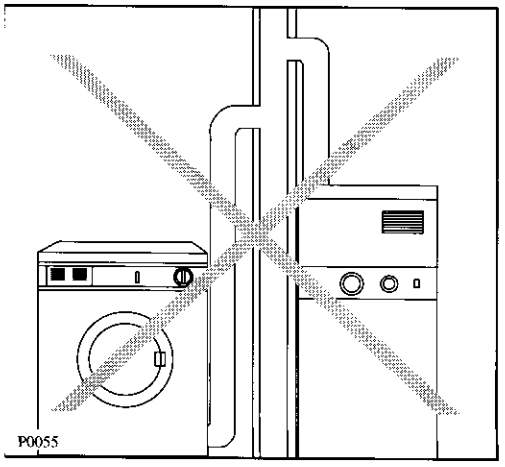

The tumble dryer must be installed in a clean place, where dirt does not build up.

Make sure there are no obstructing items or materials near the air-intake louvres provided at the back (such as for example paper, rags, etc.).

Level the tumble dryer into place by screwing or unscrewing the front feet as required.

Accurate levelling will keep vibration and noise to a minimum when the dryer is in use.

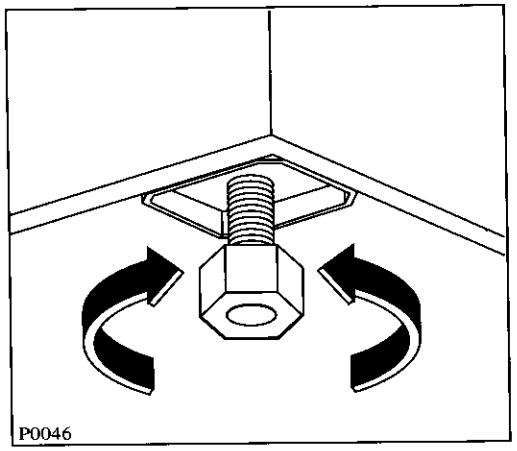

Electrical connection

Before plugging the appliance into the wall socket, make sure that:

the mains voltage corresponds to the voltage given in the technical specifications;

the meter, fuses, mains power supply and wall socket can all take the maximum load required.
Make sure that the socket and plug are compatible without having to use any type of adapter. If necessary, have the domestic wiring system socket replaced.

Safety standards require the appliance to be earthed.
The manufacturer accepts no liability for failure to observe the above safety precautions.

Note

Installation and, in particular, connection to the electric mains and to the discharge vent must be carried out by competent personnel or qualified technicians.

GETTING TO KNOW YOUR MACHINE

Control panel

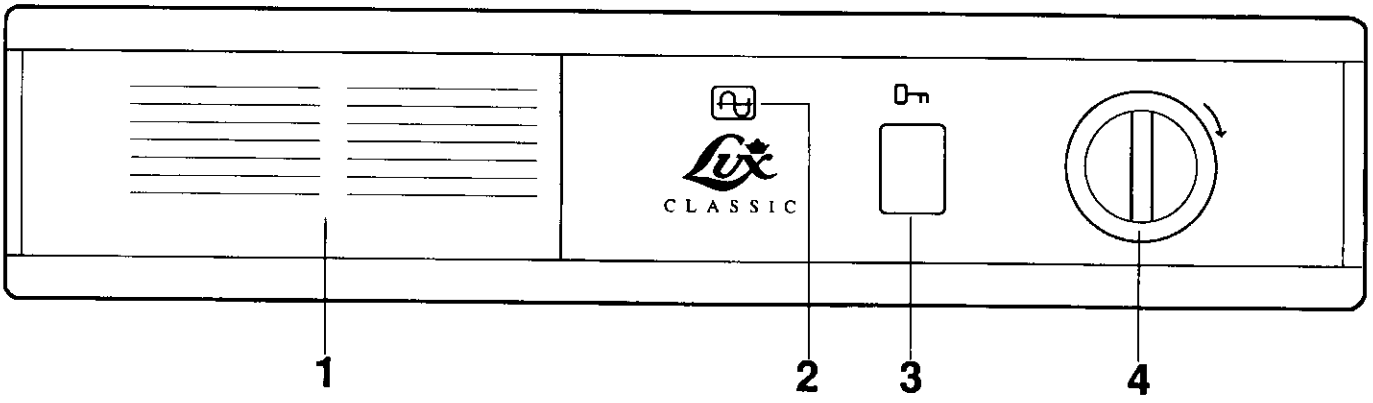

1 Programme chart

2 Mains on light

3 Door opening button

4 Drying time selector knob

Symbols and controls

The pilot light comes on when the machine starts operating and goes out at the end of the programme.

Depress this button to open the door.

Drying time selector

The selector dial is marked with times in minutes corresponding with those on the chart .

To set the machine to the selected time, turn the dial clockwise until the time you want coincides exactly with the pointer.

The selector dial of model WT 60 incorporates two drying cycles, one of up to 120 minutes at a high temperature for natural fabrics, and one of up to 80 minutes at a low temperature for synthetic fabrics.

The selector dial of model WT 50 allows you to select the required drying time up to 120 minutes.

The selected time can be extended when the original programme is completed, by resetting the knob for a further period of drying.

It is better to select a time which is too short and then set the dial for a further period if necessary.

Select the drying time according to the chart.

The programme guide is designed to help you.

Remember that during the last 12 minutes of the operation the heat is cut off in order to carry out a fabric cooling phase, which prevents any creasing or crumpling of the fabrics.

DRYING TIMES

Cotton and linen

Load	Spun at	Drying time	
		Iron dry	Store dry
Full load	500 rpm	65-85	80-100
	800 to 1000 rpm	45-65	65-85
Half load	500 rpm	45-55	50-60
	800 to 1000 rpm	30-40	45-55

Synthetics

Load	Spun at	Drying time	
		Iron dry (WT 50)	Iron dry (WT 60)
Full load	500 rpm	25-35	50-60
Half load	500 rpm	20-25	30-40

If the laundry is spin-dried in a washing machine at less than 500 rpm the residual dampness will be higher and consequently the drying time should be increased.

This applies particularly to laundry consisting primarily of towels.

USING YOUR MACHINE

1. Place the laundry in the drum.

Open the loading door by pressing the button. Load the items you have to dry one at a time, shaking them out loosely and close the door.

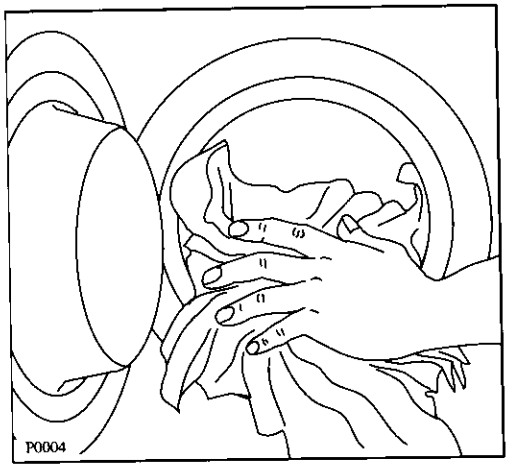

2. Select the drying time

Turn the selector dial clockwise to the required time.

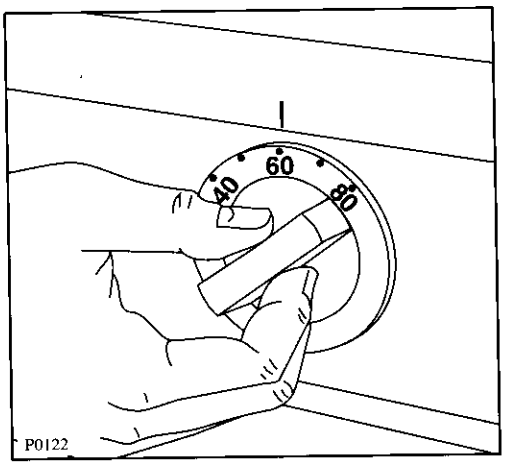

The mains on light will illuminate and the dryer starts operating.

3. When drying is completed.

The machine stops automatically and the mains on light goes out.

If the laundry is still too damp, select a further brief drying time, bearing in mind that during the 12 last minutes the dryer carries out the cooling and anticrease treatment phase.

HINTS ON DRYING

Do not overload the dryer. During the first times you're using the dryer weigh the laundry loads.

Here is a list of the average weights of the more common laundry items according to an approximate basis.

Sheet	700 to 1000 gr
Pillowcase	100 to 200 gr
Tablecloth	400 to 500 gr
Table napkin	50 to 100 gr
Kitchen towel	70 to 120 gr
Linen hand towel	100 to 150 gr
Sponge hand towel	150 to 250 gr
Sponge bath towel	700 to 1000 gr
Bathrobe	1000 to 1500 gr
Shirt	200 to 300 gr
Apron	150 to 200 gr

■ However, the best and most economical load is the maximum indicated for the different types of fabric.

■ Always load well spun laundry.

The higher the spin speed the lower is electric energy consumption and the shorter is the drying time.

■ Do not leave the damp laundry load in a heap too long before drying.

■ Sort the laundry out: separate synthetics from cotton and linen and dry them separately.

■ Close poppers and zips and fasten any buttons found loose.

■ Do not use the tumble dryer to dry the following:

- Dry-cleaned fabrics or fabrics cleaned with chemical solvents.
- Woollen garments and those manufactured from synthetic/wool mixtures of the heat-shrinkable type.
- Very delicate articles such as silk and curtains made of synthetic material.
- Foam-rubber articles.
- Fibre-glass articles.

■ In some cases, labels on articles may also be of help.

Vigorous drying

Delicate drying

Do not tumble dry

■ Avoid drying dark clothes with light coloured fluffy items such as towels as they could attract the fluff.

■ If you overdry the laundry, besides wasting energy, any subsequent ironing may become more difficult because the fabric could be heavily crumpled.

■ Remove the laundry when the dryer has finished drying.

■ To avoid a static charge when drying is completed, use either a fabric softener when you are washing the laundry or a fabric conditioner specifically for tumble dryers.

■ When you have ultimated tumble drying do not forget to clean the filter. If the filter is dirty, drying times are increased considerably and consequently energy consumption is also increased.

MAINTENANCE

Important

You are advised to unplug the appliance before all cleaning and maintenance operations.

External cleaning

Use only soap and water and then dry thoroughly.
From time to time, apply a little wax furniture cream with a soft cloth.

Cleaning the filter

Your dryer will only function well if the filter is clean.
The filter collects all the «fluff» which accumulates during drying and it must therefore be removed and cleaned at the end of each programme.
To remove the filter it is sufficient to lift it up.

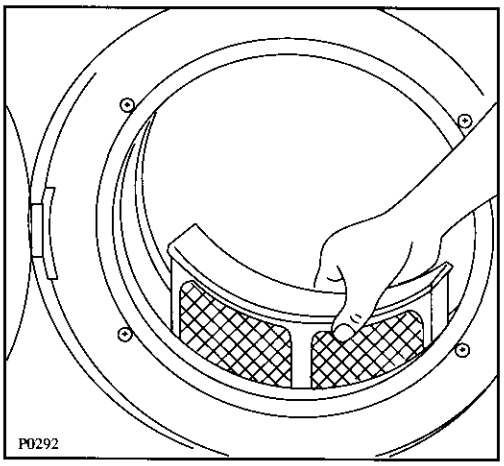

It is perfectly normal for fluff to accumulate in the filter during drying. In fact, even fabrics dried in the open air lose their fibres, but we do not notice it.

Fluff will eventually deposit also in the door openings and in the filter seat.
We therefore suggest that you also clean these parts periodically using a normal vacuum cleaner.

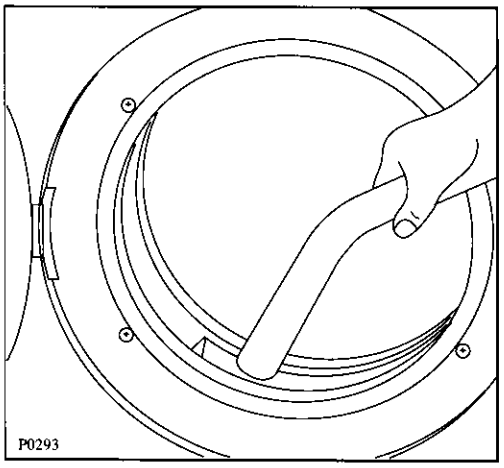

SOMETHING NOT WORKING?

If the appliance does not start up:

Check that:

- the door is firmly shut;
- the mains fuse is intact;
- the drying time selector dial has been set correctly.

If the appliance does not dry properly:

Check that:

- the filter is not clogged;
- the drying time is sufficient;
- the machine is not overloaded;
- the installation has been carried out according to the relevant instructions. In particular, check efficiency of air-intake louvres and of the condensation vent.

If you are unable to identify or solve the problem, consult our servicing department. Before telephoning, make a note of the make, model and date of purchase of your machine: the Service Department will require this information.

You will find the rating plate at the back of the appliance.

50 22 608 300/9